

**Auto Breeze**  
**Cotton Candy Machine**  
**Operating Instructions**

**IMPORTANT NOTE: THE TRANSPORT BOLTS MUST BE TIGHTENED BEFORE TRANSPORTING THE UNIT.**

1. Read and follow all instructions completely, including those on the machine, before operation. Failure to do so may result in poor performance, injury or damage to the unit.
2. Place the AUTO BREEZE on a stable, level surface. Plug the power cord into an appropriate power source. Loosen and push down TRANSPORT BOLTS on either side of the spinner head.
3. With the Candy Switch set to OFF turn POWER SWITCH to ON. The spinner head **should not** start to rotate.
4. With the spinner head still, fill the spinner head to just below the cone structure, just above the heating elements. Do not overfill! Overfilling may result in burning your flossugar or damaging the machine. Even out the flossugar by hand-turning the spinner head.
5. Turn the CANDY SWITCH to ON. The spinner head will start to rotate and heat. After about 45 seconds the machine will begin to produce cotton candy.
6. When the spinner head is empty, or to stop making cotton candy, turn the CANDY SWITCH to OFF. The auto-cooling cycle will start. The machine may vibrate

considerably at the end of the cooling cycle, this is normal. When the cooling cycle completes the spinner head will stop rotating. **Do not refill the spinner head while it is spinning!**

7. When the spinner head has stopped either re-fill with flossugar as above, or if you've finished make sure the POWER SWITCH is OFF.
8. Unplug the machine and retighten the TRANSPORT BOLTS when you are done. IT IS VERY IMPORTANT THE **TRANSPORT BOLTS** ARE TIGHTENED BEFORE MOVING THE COTTON CANDY MACHINE.

**DO NOT CLEAN OR DISASSEMBLE THE COTTON CANDY MACHINE! WE WILL GLADLY DO THE CLEANING.**  
**THANK YOU.**

If you experience any difficulties with your rental immediately call 360-754-7638

- . Thank you for renting from **Celebrations**. We hope your event is successful.